## Superior Shade Add-On for 6' Bench (B6WBRCS) • Model STS765BA

1050 Columbia Dr · Carrollton, GA 30117 · 800-327-8774 · sales@siibrands.com

### INSTALLATION GUIDELINE

USER GROUP: 2-5 Years, 5-12 Years RECOMMENDED CREW: 1-2 People TOOLS REQUIRED: • TT-30, TT-45 Torx, 9/16" Hex • Level, Square, Hammer / Mallet, Plastic / Metal Saw • Drill Bits: 5/32" • High Speed 3/8" Electric Drill with Clutch NOTE: Use of any other driver may result in damage to product, tool, and/or hardware! NOTE: Apply Thread Locking Solution to ALL Non-Patched Hardware with Threads! INSTALLATION TIME: 1 Hour WEIGHT: 84 lbs. CONCRETE REQUIRED: None


### PRE-INSTALLATION CHECK:

Playgrounds


**Customer is responsible** for verifying materials received by comparing received items with packing list. If any parts are missing or damaged, including documentation, contact your local sales representative immediately.

**Supplier is not responsible** for items discovered missing after 72 hours from time of delivery.

Before beginning installation, all installers must read and understand the Installation Introduction manual as supplied. If you did not receive a copy, or if you have any questions regarding any information in the Installation Instructions or this Installation Guideline, contact your local sales representative.

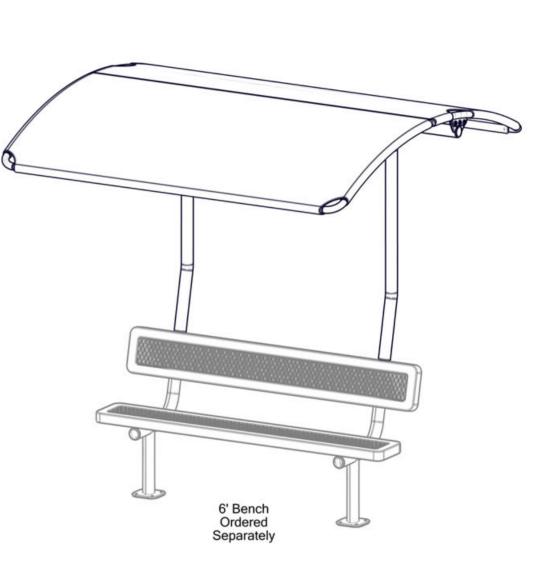




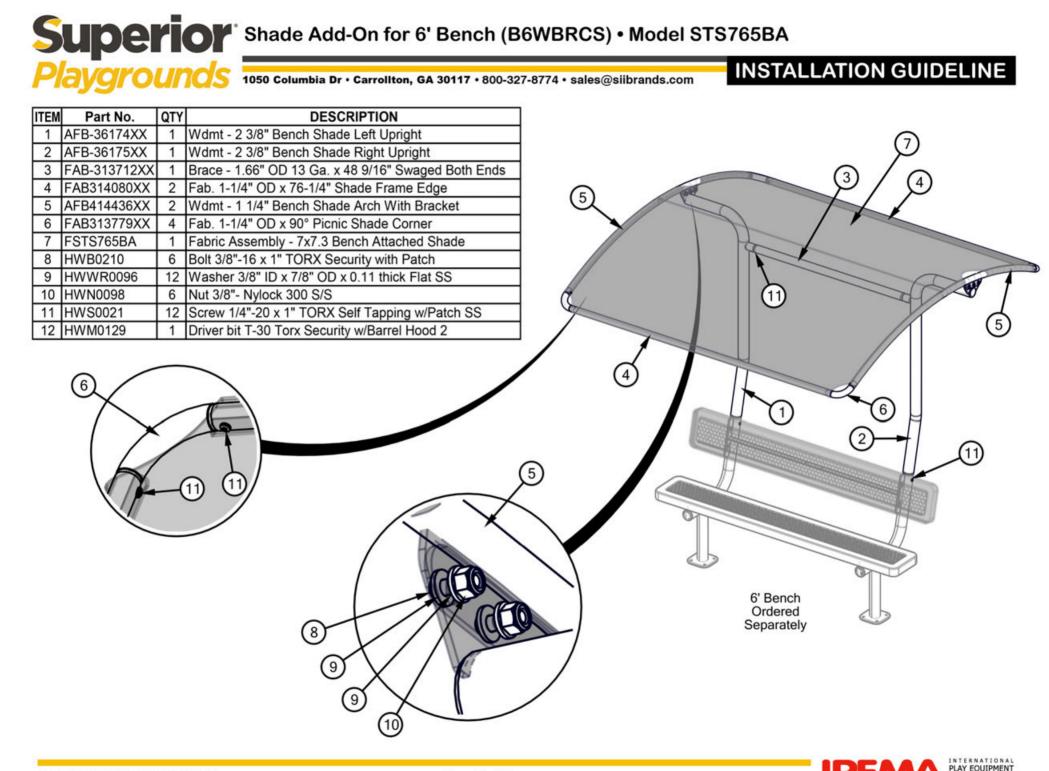

MODEL NUMBER: STS765BA DATE: 05/20/21 MANUFACTURER




STEP 1 Guideline shows 6' bench (B6WBRCS) in place. Center shade in all directions over picnic table. Overall dimensions are shown below.

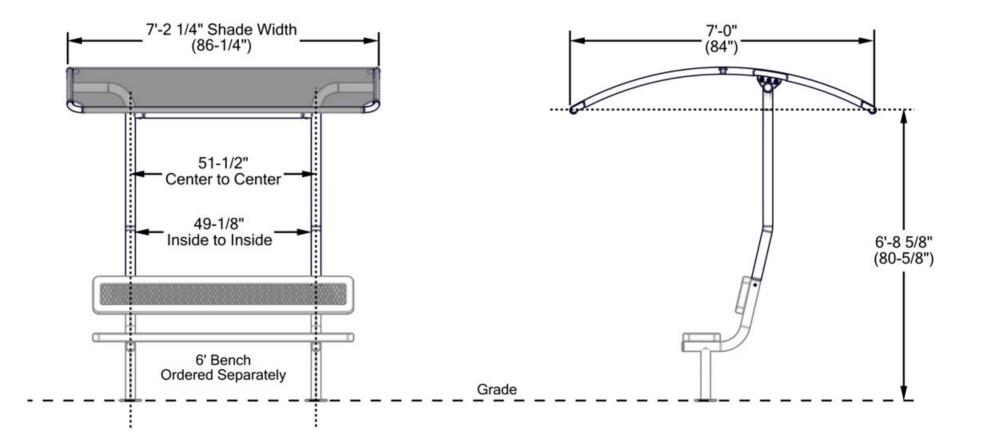


# Superior Shade Add-On for 6' Bench (B6WBRCS) • Model STS765BA Playgrounds 1050 Columbia Dr • Carrollton, GA 30117 • 800-327-8774 • sales@siibrands.com

INSTALLATION GUIDELINE

### STEP 2

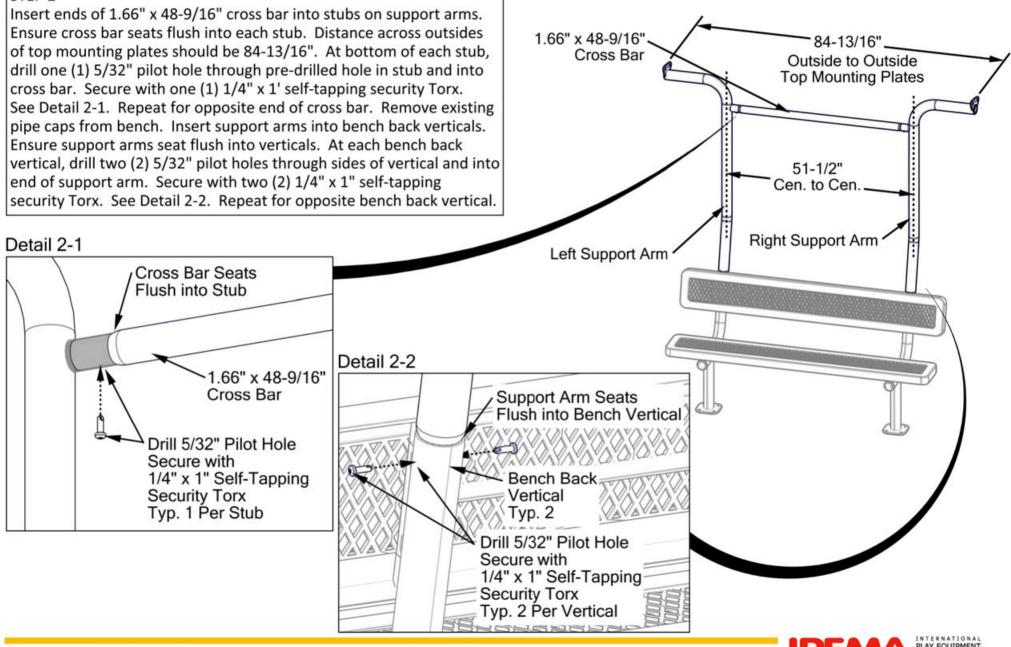

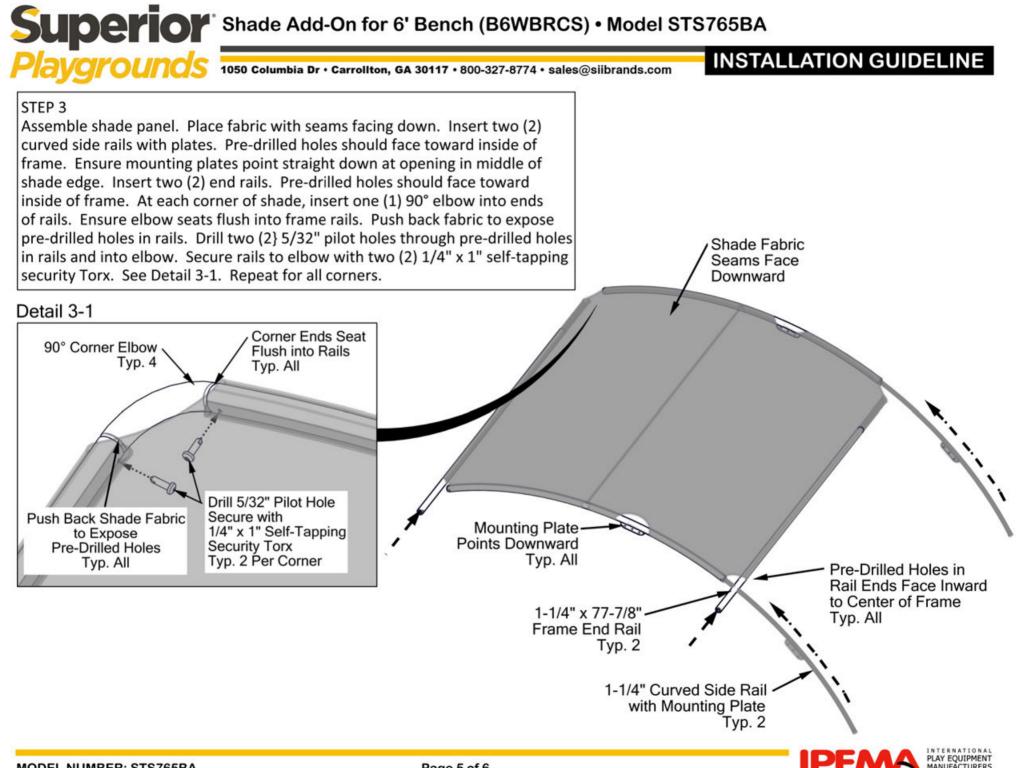

Superior Shade Add-On for 6' Bench (B6WBRCS) • Model STS765BA

1050 Columbia Dr · Carrollton, GA 30117 · 800-327-8774 · sales@siibrands.com

INSTALLATION GUIDELINE

#### STEP 4

Playgrounds

Place shade and frame onto top ends of support arms. Frame mounting plates should be on outsides of top mounting plates. Align holes in all mounting plates. Secure each side of frame to arm with three (3) 3/8" x 1 security Torx, six (6) 3/8" x 7/8" flat washers, and three (3) 3/8" Nylon lock nuts. See Detail 4-1. Repeat for opposite side of frame. Check all connections and ensure structure is stable. Installation is complete. Place one (1) Age Appropriate Sticker on structure in a clearly visible location.

