
Site Amenities-

BY SUPERIOR RECREATIONAL PRODUCTS



Model # T46RACSPEDSM

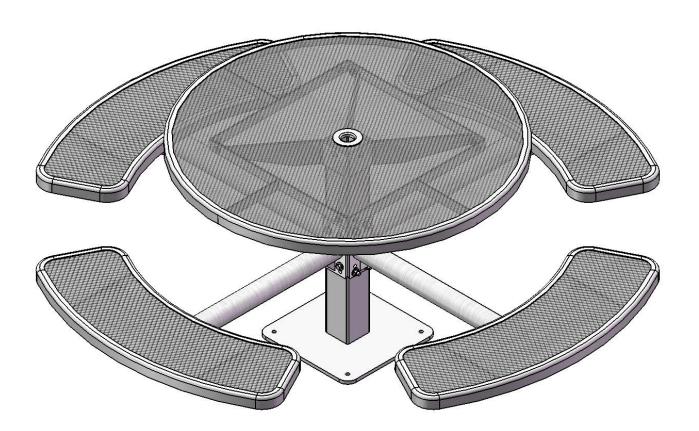

4/1/2019 Page 1 of 9

HARDWARE 7/16" x 5-1/2" Machine Bolt 7/16" Washer 7/16" Hex Nut 5/16" x 1" Machine Bolt 5/16" Kep Nut 5/16" Washer 3/8" x 1" Carriage Bolt 3/8" Washer 3/8" Hex Nut SUPERIOR[®] RECREATIONAL PRODUCTS

4/1/2019 Page 2 of 9

A PLAYCORE Company

PRODUCT SPECIFICATIONS

T46RACSPEDSM 46" ROUND SURFACE MOUNT TABLE WITH 4 SEATS

Top & Seats: 11 gauge die formed angle frame 1"x1-7/8" with 3" radius on the seat corners. 3/4" #9 steel expanded metal. The understructure/attachment plates are fabricated from 7 gauge x 1-1/2" flat bar. Top is additionally supported to the outer frame with 7 gauge x 1-1/2" flat bar. All electrically MIG welded.

Coating: Oven fused functionalized polyethylene copolymer-based thermoplastic. Fluidized bed coating application with superior mechanical performance, impact resistance and UV-stability.

Frame: Main support column is 4"x4"x11 gauge pre-galvanized structural steel tubing. Arms are fabricated from 2-7/8" O.D. x 12 gauge pre-galvanized structural steel tubing welded to 1/4" precision punched plates for attachment to the main column and 2"x2"x3/16" structural steel angle for lateral seat support. Seat attachment points are 10 gauge precision punched tabs. Table top attachment structure is fabricated from 2"x2"x3/16" structural steel angle and top attachment points are 7 gauge x 1-1/2" steel flat bar. 16" x 16" x 1/2" surface mount plate attached to main support column. All electrically MIG welded.

Frame Coating: Electrostatic powder coated application oven cured.

Hardware: All stainless steel hardware fasteners.


Dimensions: Top is 46" diameter x 30-1/4" high. Seats are 12" wide x 41-1/2" long x 18" high. Outside to outside dimensions of 4 seat table is 81" square.



4/1/2019 Page 3 of 9

COMPONENTS


Recommended Surface Mount Hardware: 3/8" x 3-1/2" Concrete Expansion Anchor Bolts (Not Included)

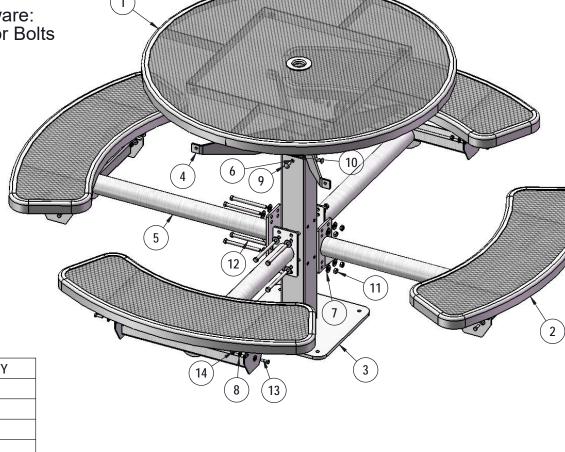

ITEM NO. PartNo DESCRIPTION QTY 1 T-V46RD-T 46" Round Expanded Top 1 2 T-V36RD-S 3' Expanded Round Seat 4 3 P-338SM 338 SM post asem 1 4 P-01-04-0150 H Bracket 1 5 P-V338-ARM 338 vinyl arm 4 6 33-02-0008 3/8" Flat Washer (SS) 4 7 33-02-0004 7/16" SS Washer 16 8 33-02-0007 5/16" SS Washer 40 9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20 14 33-03-0012 5/16" Kep Nut (SS) 20				
2 T-V36RD-S 3' Expanded Round Seat 4 3 P-338SM 338 SM post asem 1 4 P-01-04-0150 H Bracket 1 5 P-V338-ARM 338 vinyl arm 4 6 33-02-0008 3/8" Flat Washer (SS) 4 7 33-02-0004 7/16" SS Washer 16 8 33-02-0007 5/16" SS Washer 40 9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	ITEM NO.	PartNo	DESCRIPTION	QTY
3 P-338SM 338 SM post asem 1 4 P-01-04-0150 H Bracket 1 5 P-V338-ARM 338 vinyl arm 4 6 33-02-0008 3/8" Flat Washer (SS) 4 7 33-02-0004 7/16" SS Washer 16 8 33-02-0007 5/16" SS Washer 40 9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	1	T-V46RD-T	46" Round Expanded Top	1
4 P-01-04-0150 H Bracket 1 5 P-V338-ARM 338 vinyl arm 4 6 33-02-0008 3/8" Flat Washer (SS) 4 7 33-02-0004 7/16" SS Washer 16 8 33-02-0007 5/16" SS Washer 40 9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	2	T-V36RD-S	3' Expanded Round Seat	4
5 P-V338-ARM 338 vinyl arm 4 6 33-02-0008 3/8" Flat Washer (SS) 4 7 33-02-0004 7/16" SS Washer 16 8 33-02-0007 5/16" SS Washer 40 9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	3	P-338SM	338 SM post asem	1
6 33-02-0008 3/8" Flat Washer (SS) 4 7 33-02-0004 7/16" SS Washer 16 8 33-02-0007 5/16" SS Washer 40 9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	4	P-01-04-0150	H Bracket	1
7 33-02-0004 7/16" SS Washer 16 8 33-02-0007 5/16" SS Washer 40 9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	5	P-V338-ARM	338 vinyl arm	4
8 33-02-0007 5/16" SS Washer 40 9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	6	33-02-0008	3/8" Flat Washer (SS)	4
9 33-06-0042 3/8" x 1" Carriage Bolt (SS) 4 10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	7	33-02-0004	7/16" SS Washer	16
10 33-01-0018 3/8" Hex Nut (SS) 4 11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	8	33-02-0007	5/16" SS Washer	40
11 33-01-0006 7/16" Hex Nut (SS) 8 12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	9	33-06-0042	3/8" x 1" Carriage Bolt (SS)	4
12 33-06-0050 7/16" x 5-1/2" Machine Bolt 8 13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	10	33-01-0018	3/8" Hex Nut (SS)	4
13 33-05-0029 5/16" x 1" Machine Bolt (SS) 20	11	33-01-0006	7/16" Hex Nut (SS)	8
` '	12	33-06-0050	7/16" x 5-1/2" Machine Bolt	8
14 33-03-0012 5/16" Kep Nut (SS) 20	13	33-05-0029	5/16" x 1" Machine Bolt (SS)	20
	14	33-03-0012	5/16" Kep Nut (SS)	20




Page 4 of 9

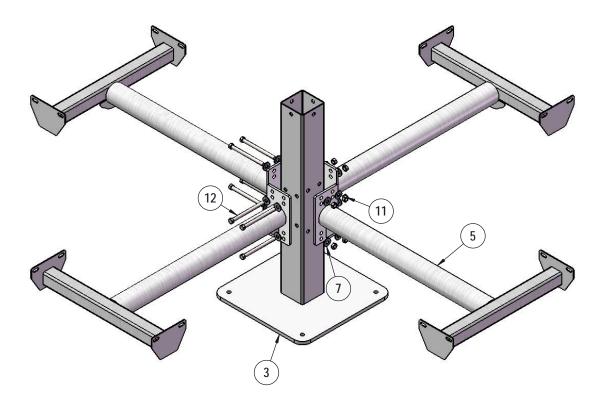

Attach the Vinyl Arms to the Post using specified hardware.




4/1/2019 Page 5 of 9

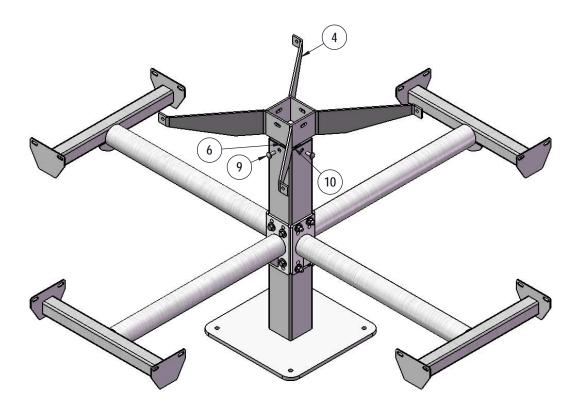

Attach the H Bracket to the Post using specified hardware.




4/1/2019 Page 6 of 9

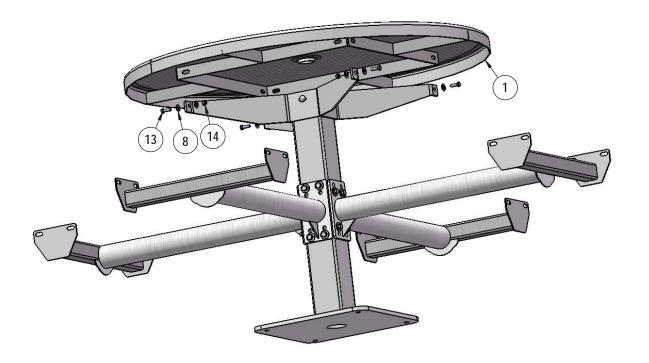

Attach the 46" Round Top to the H Bracket using specified hardware.




4/1/2019 Page 7 of 9

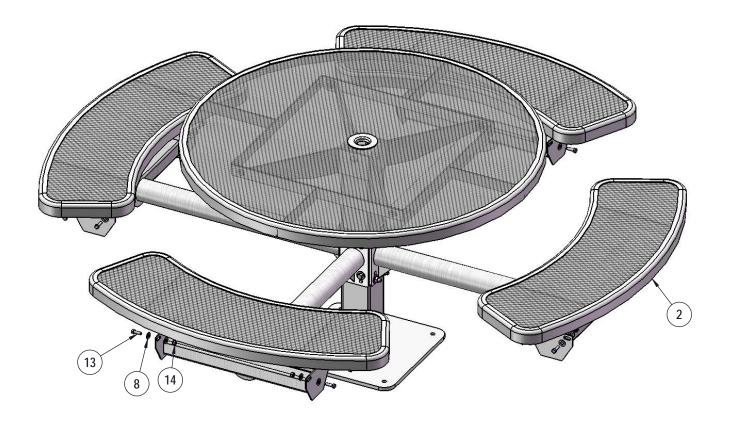

Attach the 3' Round Seats to the Vinyl Arms using specified hardware.



4/1/2019 Page 8 of 9

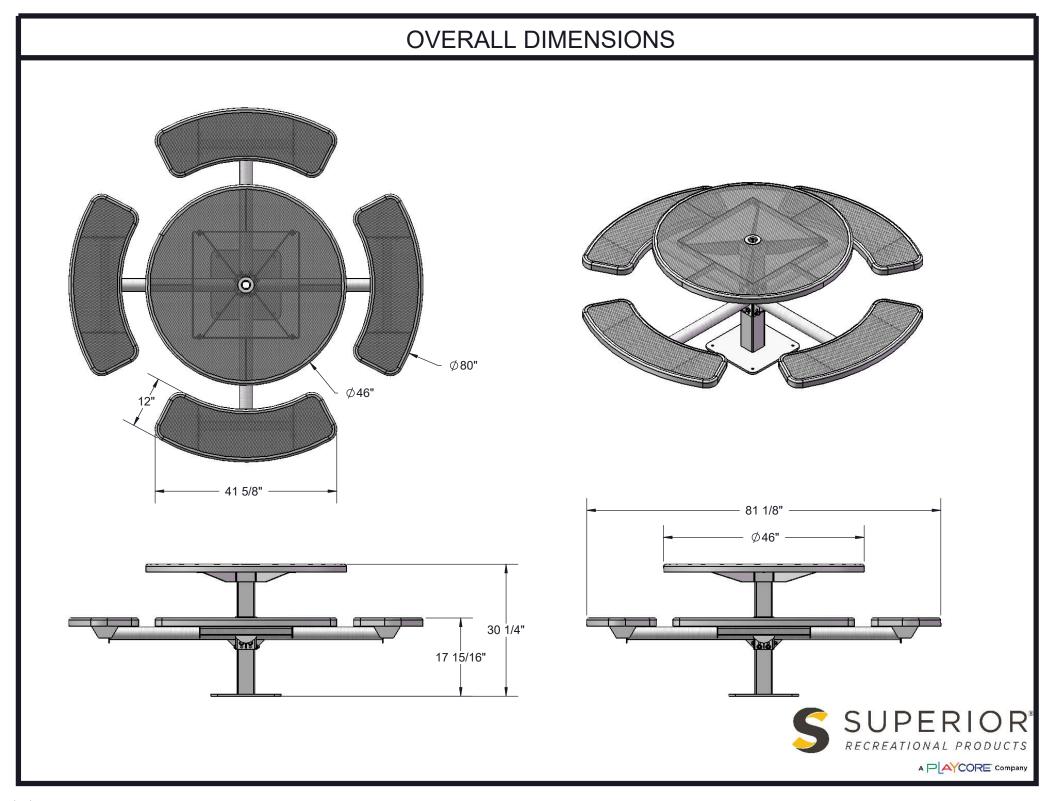

4/1/2019 Page 9 of 9